



CE 0168

LG-C360 User Guide - English

This guide will help you understand your new mobile phone. It will provide you with useful explanations of features on your phone.

 
Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



P/N: MFL67264414 (1.0)

www.lg.com

Getting to know your phone

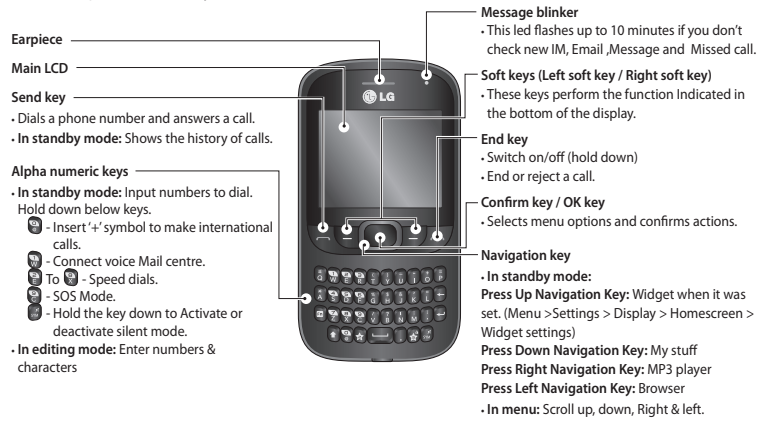

Installing the SIM Card and Charging the Battery

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important! The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.
only 2G/2.5G SIM supported

Illustrations

- 1 Remove the back cover
- 2 Remove the battery
- 3 Insert the SIM card
- 4 Insert the battery
- 5 Insert the back cover
- 6 Charging your phone



WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

Quick feature reference

Menu 1. Games & apps.

You can install new games and applications on your phone to keep you amused when you have spare time. Press Menu and select **Games & apps.**

Menu 2. Logs

You can check the record of all, calls, missed, outgoing, incoming logs and messages only. The number and name (if available) are displayed together with the date and time at which the call was made. You can also view the number of times you have called.

- **All logs:** View a complete list of all your dialled, received and missed calls and also send and received messages.
- **Calls Only:** View a list of all the numbers you have called, received calls and missed calls.
- **Messages Only:** View a list of all the numbers you have sent or received messages.

Playing a song

- 1 Press Menu and select Music, then choose MP3 player.
- 2 Choose **All songs** then select the song you want to play. Press OK Key.
- 3 Select to pause the song.
- 4 Select to skip to the next song.
- 5 Select to skip to the previous song.

TIP! To change the volume while listening to music, use the volume keys on the left hand side of your phone.
Note: The copyright of music files can be protected in international treaties and national copyright laws. Therefore, it may be necessary to obtain a permission or a license to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Before downloading or copying the file, please check the national registration of the applicable country concerning the use of such material.

FM Radio

Your LG-C360 has an **FM radio** feature so you can tune into your favorite stations and listen on the move.

Note: If you are in an area with bad radio reception, you may have difficulty listening to the radio. You will need to insert your headphones in order to listen to the radio. Insert them into the headphone socket.

• Listening to the radio

- 1 Press Menu, select Music and choose **FM radio.**
- 2 Select the channel number of the station you would like to listen to.

• Recording the Radio

- 1 Press Rec. during listening to the radio.
- 2 The recording time is displayed on your phone. If you want to stop the recording, press Stop. If recording is done, the recorded contents will be saved in My stuff -> Sounds as mp3 file.

- **Missed logs:** View a list of any calls you have missed.
- **Outgoing logs:** View a list of all the numbers you have called.
- **Incoming logs:** View a list of all the numbers that have received.

Menu 3. Camera

• Camera

- 1 Press Menu and select Camera and Camera.
- 2 When the camera has focused on your subject, select the Capture icon on the bottom-centre of the screen and press OK to take a photo.

• Video Camera

 
- 1 Press Menu and select Camera and choose Video Camera. The video camera's viewfinder will appear on screen.
- 2 Focus the camera on what to record.
- 3 Select the Rec. icon on the bottom-centre of the screen and press OK to take a video. Rec will appear at the bottom of the viewfinder. Press again to stop recording.

Memory card

Installing a memory card

You can expand the memory available on your phone using a memory card.

Note: A memory card is an optional accessory. Slide the memory card into the slot until it clicks into place. Make sure that the gold contact area is facing downwards.

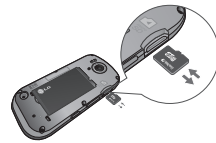

WARNING: External memory can not exceed 8GB.

Removing a memory card

Carefully remove the memory card by gently pushing it in to the phone and quickly releasing it.

• Album

View the pictures and videos you have taken in your Album.

Menu 4. Internet

You can launch the internet browser and access the homepage of the activated profile on web settings. You can also manually enter a URL address and access the associated WEB page.

- 1 In Menu mode, select Internet -> Yes to launch your service provider' homepage.
- 2 Navigate web pages using the following keys:

- **Navigation** - Scroll up or down on a web page.
- **OK** - Select an item.
- **Back** - Return to the previous page.
- **Options** - Access a list of browser options.

Note: You will incur extra cost by connecting to these services and downloading content. Check data charges with your network provider.

Menu 8. E-Mail

Sending an email using your new account

To send/receive an email, you should set up an email account.

- 1 Press Menu, select E-Mail and choose the account you want to use.
- 2 From Options choose Write e-mail and a new email window will open.
- 3 Enter address in To field then Write a subject line and press down navigation key.
- 4 Enter your message using the keypad then Press Ok to send the email.

Menu 9. My stuff

View the images, sounds, videos and others in your My stuff.

Formatting the memory card

Your memory card may already be formatted. If your memory card isn't formatted, you will need to format it before you can begin using it.

- 1 From the home screen press Menu then select Settings.
- 2 Choose Device and Memory info. and select External memory.
- 3 Press Format and enter the password, which is set to 0000 as default. Your memory card will be formatted and ready to use.
- 4 To view the new formatted folders on your LG-C360 press Menu and select My stuff. Press right navigation key two times to choose memory card.

WARNING: When you format your memory card, all the content will be wiped. If you do not want to lose the data on your memory card, back it up first.

WARNING: Do not remove your MicroSD card during the data transfer.

Menu 5. SNS (Social Network Services)

Your LG-C360 has SNS that lets you enjoy and manage your social network. You can update your own SN place status and view your friends' SN updates.

Note: SNS feature is a data intensive application. An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

Menu 6. Messaging

Your LG-C360 includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service) as well as the network's service messages.

Sending a message

- 1 Press Menu, select Messaging and choose Write message.
- 2 A new message editor will open. Message editor combines SMS and MMS in one intuitive mode that is easy to switch between. The default setting of the message editor is SMS mode.

Menu 10. Phonebook

Searching for a contact

- 1 Press Menu and select Phonebook.
- 2 Using the keypad enter the first letter of the name of the contact you want to call.
- 3 To scroll through the contacts and their different numbers use the navigation keys.


Adding a new contact

- 1 Press Menu and select Phonebook.
- 2 Press Option and select New contact.
- 3 Enter the information you want in the fields provided and select Done.

Menu 11. Tools

• Quick menu

 - 1 Press Menu and select Tools, then choose Quick menu.
- 2 Press Add and choose the menu you want to quickly approach.

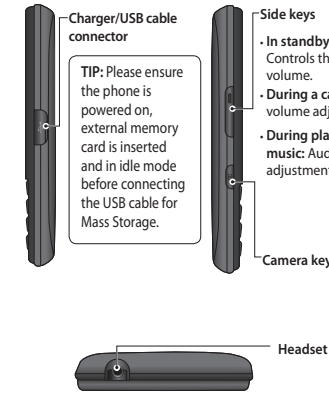

Calling

Making a call

- 1 Make sure your phone is on.
- 2 You can use the keypad. To delete a digit press back arrow.
- 3 Press to begin the call.
- 4 To end the call, press .

TIP! To enter + when making an international call, press and hold 0.

Making a call from your Contacts

It's easy to call anyone whose number you have stored in your Phonebook.

- 1 Press Menu to open the main menu. Select Phonebook.
- 2 Using the keypad, enter the first letter of the contact you want to call and scroll to the Phonebook.
- 3 Press to begin the call.

3 Enter your message using the keypad. See Entering text on the right for more information on how to enter text.

- 4 Select Options and choose Insert to add an Image, Video, Sound, Text template, Multimedia template, Emoticon, Name & Number, Slide, Subject or More (Business card/Schedule/Memo/Task/My profile).
- 5 Choose Send to.
- 6 Choose a contact from the list of contacts or enter the phone number.
- 7 Select Send.

WARNING: Image, Sound, Video, Slide, Subject, Business card, Schedule or My profile is added to the message editor, it will be automatically converted to MMS mode and you will be charged accordingly.

Entering text

You can enter alphanumeric characters using the phone's keypad. For example, storing names in contacts, writing a message and creating scheduling events in the calendar all require entering text. The following text input methods are available in the phone: Abc mode, and 123 mode.

Note: Some fields may allow only one input mode (e.g. telephone number in contact fields).

• Organizer

You can access Calendar, Tasks, Memo and Calculate date to get the Target Date.

• Alarm clock

You can set up to 3 alarm clocks to go off at a specified time.

• Calculator

This contains the standard functions such as Addition, Subtraction, Multiplication and Division.

• Voice recorder

Use your Voice recorder to record voice memos or other sounds.

• Stopwatch

 
This option allows you to use the function of a stopwatch.

• Unit converter

This converts any measurement into a unit you want.

• World clock

Allows you to determine the current time in another time zone or country.

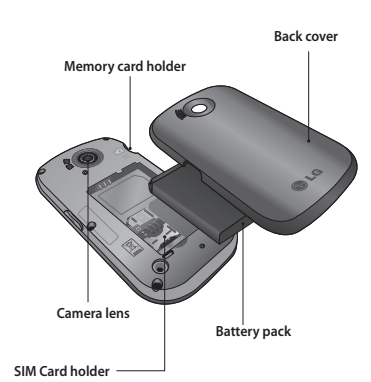

Answering and rejecting a call

When your phone rings, press Accept or press to answer the call. While your phone is ringing you can press Silent to mute the ringing. This is useful if you have forgotten to change your profile to silent for a meeting.

Press or select Reject in order to reject an incoming call.

Note: In call when speaker is activated, the speaker icon is displayed with red colour cross, when the speaker is deactivated speaker icon is displayed without red colour cross.

Speed dialling

You can assign a speed dial number to a contact you call frequently.

Text input mode using the keypad

When you want to enter text, for example when writing a message, the keypad will default to Abc mode. If you are entering a number, for example when making a call, the keypad number keys will default to numbers. To change the mode press key in editor screen.

Menu 7. Music

MP3 Player

Your LG-C360 has a built-in music player so you can play all your favourite music.

Note: Before using music player, you will need to transfer music file onto your phone. Music player supports codec types as follows: MP3, WMA, AAC. Music player does not necessarily support all features and variations of file formats.

• SIM services

This feature depends on SIM and the network services. In case the SIM card supports SAT (i.e. SIM Application Toolkit) services, this menu will be the operator specific service name stored on the SIM card.

• LED Banner

Select different colors to use as an Indicator.

Menu 12. Settings

• Profiles

Choose the profile you want to edit. Using flight mode - Flight mode will not allow you to make calls, connect to the internet or send message.

• Device

> **Date and time:** Select Auto update On, and the phone will automatically update the date and time.

> **Battery status:** Choose to switch the factory set power save settings On or Off.

