

LG-E900 Quick Reference Guide - English

- **This guide helps you to start using your phone. If you need more information, please visit www.lg.com.**
- Some of the contents of this manual may not apply to your phone, depending on your phone's software or your service provider.
- This handset is not recommended for the visually impaired because of its touch-screen keypad.
- Copyright ©2010 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.



Disposal of your old appliance

- 1 When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
- 2 All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- 3 The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- 4 For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.



Edited with **Infus PDF Editor**
- free for non-commercial use.

To remove this notice, visit
: www.pdfediting.com

Assembling

Getting to know your phone

Headset jack

Power/Lock key

- Long press (three seconds) to the power on/off.
- Short press to turn the screen off.

Earpiece

Proximity sensor

ALS(Ambient Light Sensor)

Search button

Open Quick Search

Start button

Return to the Start screen;
Start the Voice Recognition function (press and hold).

Back button

Return to the previous screen.

Mouthpiece



WARNING:

Placing a heavy object on the phone or sitting on it can damage its LCD and touch screen functionality. Do not cover the protective film on the proximity sensor of the LCD, as this can cause the sensor to malfunction.

Volume keys

- **When the screen is idle:** volume of system tone & ring tone.
- **During a call:** earpiece volume.
- **When playing a track:** controls track volume.



 
Charger, data cable (USB cable port)

TIP! Before connecting a USB cable, wait until the phone has powered up and been registered on the network.

Camera key

- Go directly to camera preview by pressing the camera key.


Open view

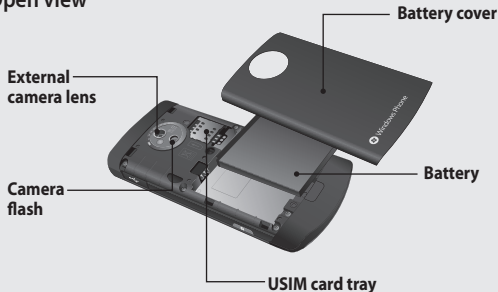

Installing the USIM and battery

1 Remove the battery cover

 Press the battery cover release button as shown in the image below (1). Lift the cover away from the phone (2).

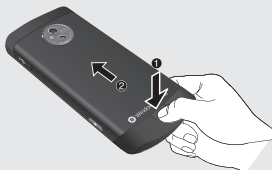

2 Remove the battery

 
Using the cut-out at the bottom, lift the battery out of its compartment.



WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

3 Install the USIM card

Put the USIM card into the USIM card holder. Make sure the gold-coloured contact area on the card is facing into the phone. Push the USIM card holder back.

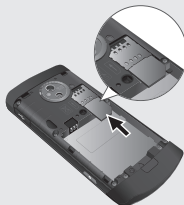

4 Install the battery

First, insert the top of the battery into the top edge of the battery compartment. Ensure that the battery contacts align with the phone's terminals. Press the bottom of the battery down until it clips into place.



5 Charging your phone

Open the charger port cover on the side of your LG-E900. Insert the charger connector into the port and plug the charger into a mains electricity outlet.





You cannot switch on the phone if the battery is fully discharged. It takes approximately four to five minutes to reach a charge state sufficient for booting by TA charger.


It takes approximately 14-15 minutes longer to charge using a USB connection.


If the battery is critically low, the image for the critically low battery will appear to notify you to charge for longer.


NOTE: The battery must be fully charged initially to improve battery life.

 **WARNING:** Do not connect the charger to the phone without the battery being installed. You must check the battery is inserted before charging.

 **WARNING:** Make sure that no sharp items come into contact with the battery. This could pose a fire risk.

 **WARNING:** Do not remove the battery or USIM card while charging the phone.

 **WARNING:** There is a risk of explosion if the battery is replaced by an incorrect type. Dispose of used batteries in accordance with the manufacturer's instructions.

 **WARNING:** Unplug the charger from the mains and phone during lightning storms to avoid electric shock or fire.

Navigating your Windows Phone

Using the touch screen

Touch screen tips

Your phone's touch screen lets you easily select items or perform functions. Learn basic actions to use the touch screen.

NOTE:

- To avoid scratching the touch screen, do not use sharp objects.
- Do not allow the touch screen to come into contact with other electrical devices. Electrostatic discharges can cause the touch screen to malfunction.
- Do not allow the touch screen to come into contact with water. The touch screen may malfunction in humid conditions or if exposed to water.
- For optimal use of the touch screen, remove the screen protection film before using your phone.
- Your touch screen has a layer that detects small electrical charges emitted by the human body.
- For best performance, tap the touch screen with your fingertip. The touch screen will not react to touches by sharp objects, such as a stylus or pen.

NOTE:

- Your phone turns off the touch screen when you do not use it for a specified period. To turn on the screen, press the [Power] button.
- You can also adjust the backlight time or change the wallpaper. On the Start screen, go to the application list and select **Settings > lock & wallpaper**.

Universal gestures on your touch screen

For most applications, natural gestures can be used to move about and give commands. To type text, use the onscreen or the hardware keyboard.

The following gestures are used to move around for your Windows Phone 7:

Tap

A tap is a single, quick downward touch on the screen. Tap is used to execute commands (like pressing Enter on a PC). Tapping also stops any movement on the screen.



Double tap

A double tap is two quick downward touches on the screen in the same place. The double tap commands the phone to zoom in or out, as appropriate.



Touch and hold

To touch and hold, the finger is pressed down and held there for a few seconds.



Scroll

Scrolling is for moving objects upwards and downwards.

The finger is pressed down and moved in the desired direction. To end the scrolling, the finger is lifted up. Either the content will follow (as with moving a map into the centre of the screen) or it can be used for reordering items.



Flick

Flicking is for moving objects sideways. The finger is pressed down and moved in the desired direction. To end the gesture, the finger is lifted up. Either the content will follow (as with moving a map into the centre of the screen) or it can be used for reordering items.



Pinch and stretch

Pinch and stretch are opposites of each other. These gestures are often used with maps to zoom in and out.

Pinching is achieved by pressing two fingers down on the screen and bringing them together. This zooms in on content, while centering the image between the finger tips. For stretching, the fingers are moved apart from each other to zoom out on an image.




Getting to know your Start screen

From this screen you can access menu options, make a call, view the status of your phone and much more.



Knowing and navigating the screen

Start screen is the beginning of the Windows Phone 7 experience for you after you power on your phone. The Start screen displays application tiles that you have pinned and placed in a position of your choice for quick launch. Pressing the [Start] Button  on the phone always returns you to the Start screen, no matter what application is running.

1 Simply swipe your finger to the left, right, up or down to view them.

You can also customise tiles on the Start screen, which are shortcuts to your favourite menus and applications.


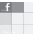


NOTES: When you are in a standby display after unlocking the phone, swipe your finger upwards to see the Start screen displaying application tiles.








Tiles on the Start screen

A tile is an easily recognisable visual shortcut for an application or its content. You can place tiles anywhere on the phone Start experience.

Tiles that use the tile notification feature can update the tile graphic or title text, or increment a counter, enabling you to create a personalised, “at a glance” Start experience. Examples include displaying if it is your turn in a game, the weather, or how many email messages you have received.

The Start screen is always presented in portrait view.

Icon	Description
	Make calls, with quick access to recent callers, favourites, and all your contacts. Dial manually using the numeric keypad. Just tap the voicemail icon to listen to voice message you want, in any order you like.
	Touch to access People hub, the integrated communication application for emails, messages, contacts and other information.
	Send and receive SMS text messages. Conversations are saved in an instant chat style, so you can see a history of messages you've sent and received. Send MMS messages with a picture you've taken.
	Your Windows Phone works with Microsoft Exchange, Microsoft Outlook Web App and many of the most popular email systems, including Hotmail, Yahoo! Mail, Google and others. Save attached photos and graphics to your Saved Pictures.

Icon	Description
	Touch Play To to stream videos, music, and pictures from your phone to Digital Living Network Alliance (DLNA) compatible playback devices.
	With ScanSearch, you can search product and local information for streets, cities, or countries. ScanSearch allows you to view local business information, including locations and contact information.
	Enter events on your new Windows Phone. Subscribe to calendars. Set alerts to remind you of events, appointments and deadlines. Plus, they get synced back to the calendar on your Windows Live and vice versa.
	Touch to access the Internet Explorer.
	Access to Xbox LIVE to play a game and invite a friend to play it with you. Download new games onto your phone.
	View photos and videos you've taken with your new Windows Phone, received in Email or MMS messages, or synced from your computer's Zune Software. (Windows OS only) View them in portrait or landscape format. Zoom in on photos for a closer look. Send an email or MMS messages with attached photos.
	Play musics, videos and podcasts stored in the device by connecting to your PC to synchronise your stuff. Listen to FM radio. Go to marketplace.

Icon	Description
------	-------------



Search the Application Store for your Windows Phone applications and musics you can purchase or download, using your Wi-Fi or cellular data network connection. Read reviews or write your own reviews for your favourite apps. Download and install the applications on your Start screen.

NOTES: The arranged location, name, or design of tiles may vary by your setting status, area, service provider, plan, and version of Windows Phone software. Application functionality and availability may vary depending on the country or region where you purchase and use your Windows Phone. Contact your service provider for more information.

[illegible]

[illegible]



Edited with **Infix PDF Editor**
- free for non-commercial use.

To remove this notice, visit
: www.pdfediting.com

[illegible]

[illegible]